

STEAMPUNK

 
 
 
 
 
 
 
PC POWER SUPPLY

SILVER

FULL-MODULAR



Edited by Amanda
Version 1.2
2023.04.14

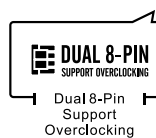




MODEL : PS-650AX

Dimensions(L*W*H)	160*150*86MM
Modular	FULL-Modular
Certifications	80PLUS SILVER
Warranty	7years
Efficiency	80PLUS SILVER ,88.26%at typical loading
PFC	ActivePFC
FanSize	140MM Hydraulic Bearing
Protections	UVP,OVP,OPP, SCP,Lightning Protection,OTP
Operation Temperature	0~40°C
Circuit Structure	LLC+DC-DC



MODEL : PS-750AX

Dimensions(L*W*H)	160*150*86MM
Modular	FULL-Modular
Certifications	80PLUS SILVER
Warranty	7years
Efficiency	80PLUS SILVER ,88.92%at typical loading
PFC	ActivePFC
FanSize	140MM Hydraulic Bearing
Protections	UVP,OVP,OPP, SCP,Lightning Protection,OTP
Operation Temperature	0~40°C
Circuit Structure	LLC+DC-DC

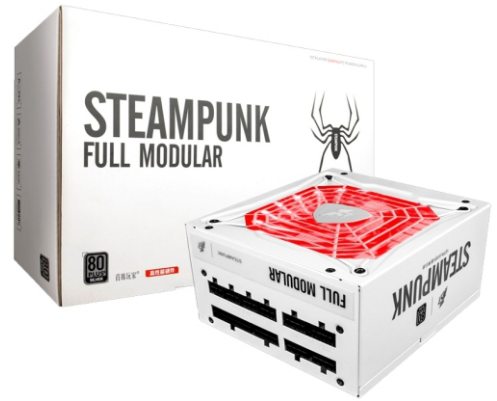 

100-240Vac
50-60Hz
10A Max



100-240Vac
50-60Hz
10A Max



+5V 20A
+3.3V 20A
+12V 54A
+5VSB 2.5A
-12V 0.3A



+5V 20A
+3.3V 20A
+12V 62A
+5VSB 2.5A
-12V 0.3A



 
+5V/+3.3V 100W
+12V 648W
RATED PWOER
650W




+5V/+3.3V 100W
+12V 744W
RATED PWOER
750W





Safety&Regular

EAC CB RoHS FC CE





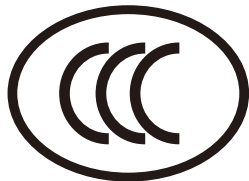


SAA-202494-EA

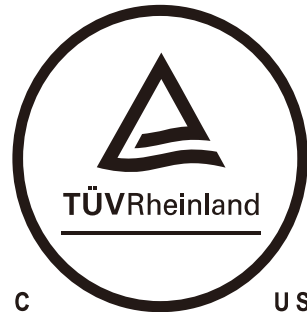 


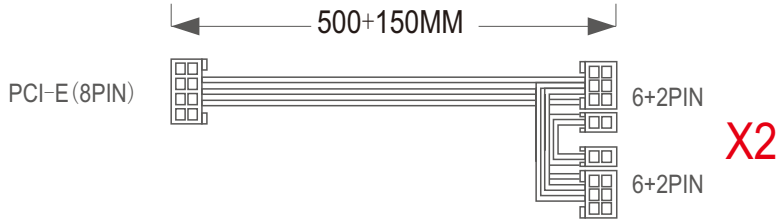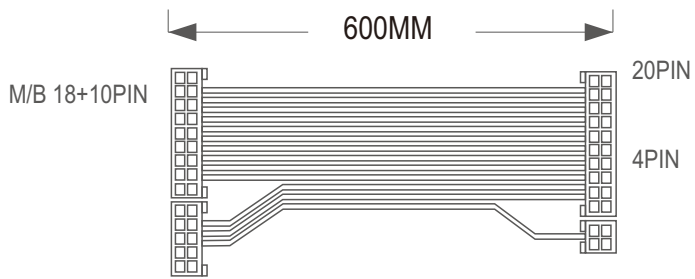    


MODEL: PS-650AX

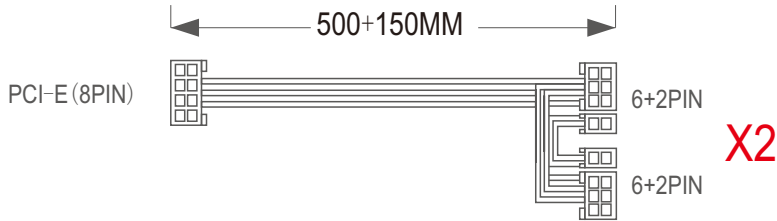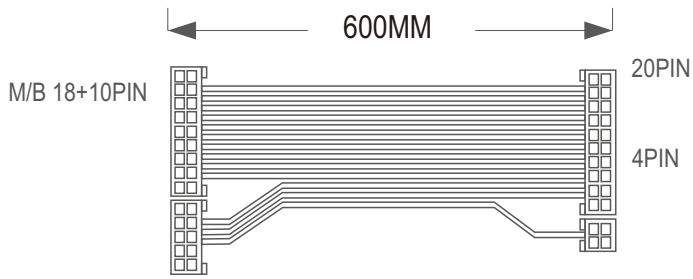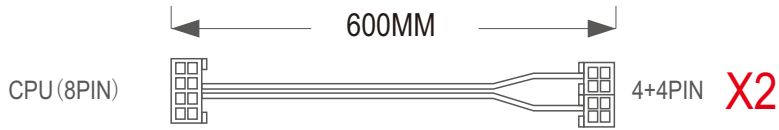     

MODEL: PS-750AX

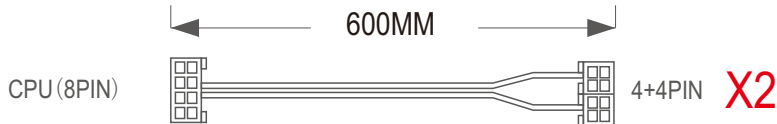 


Pin Layout

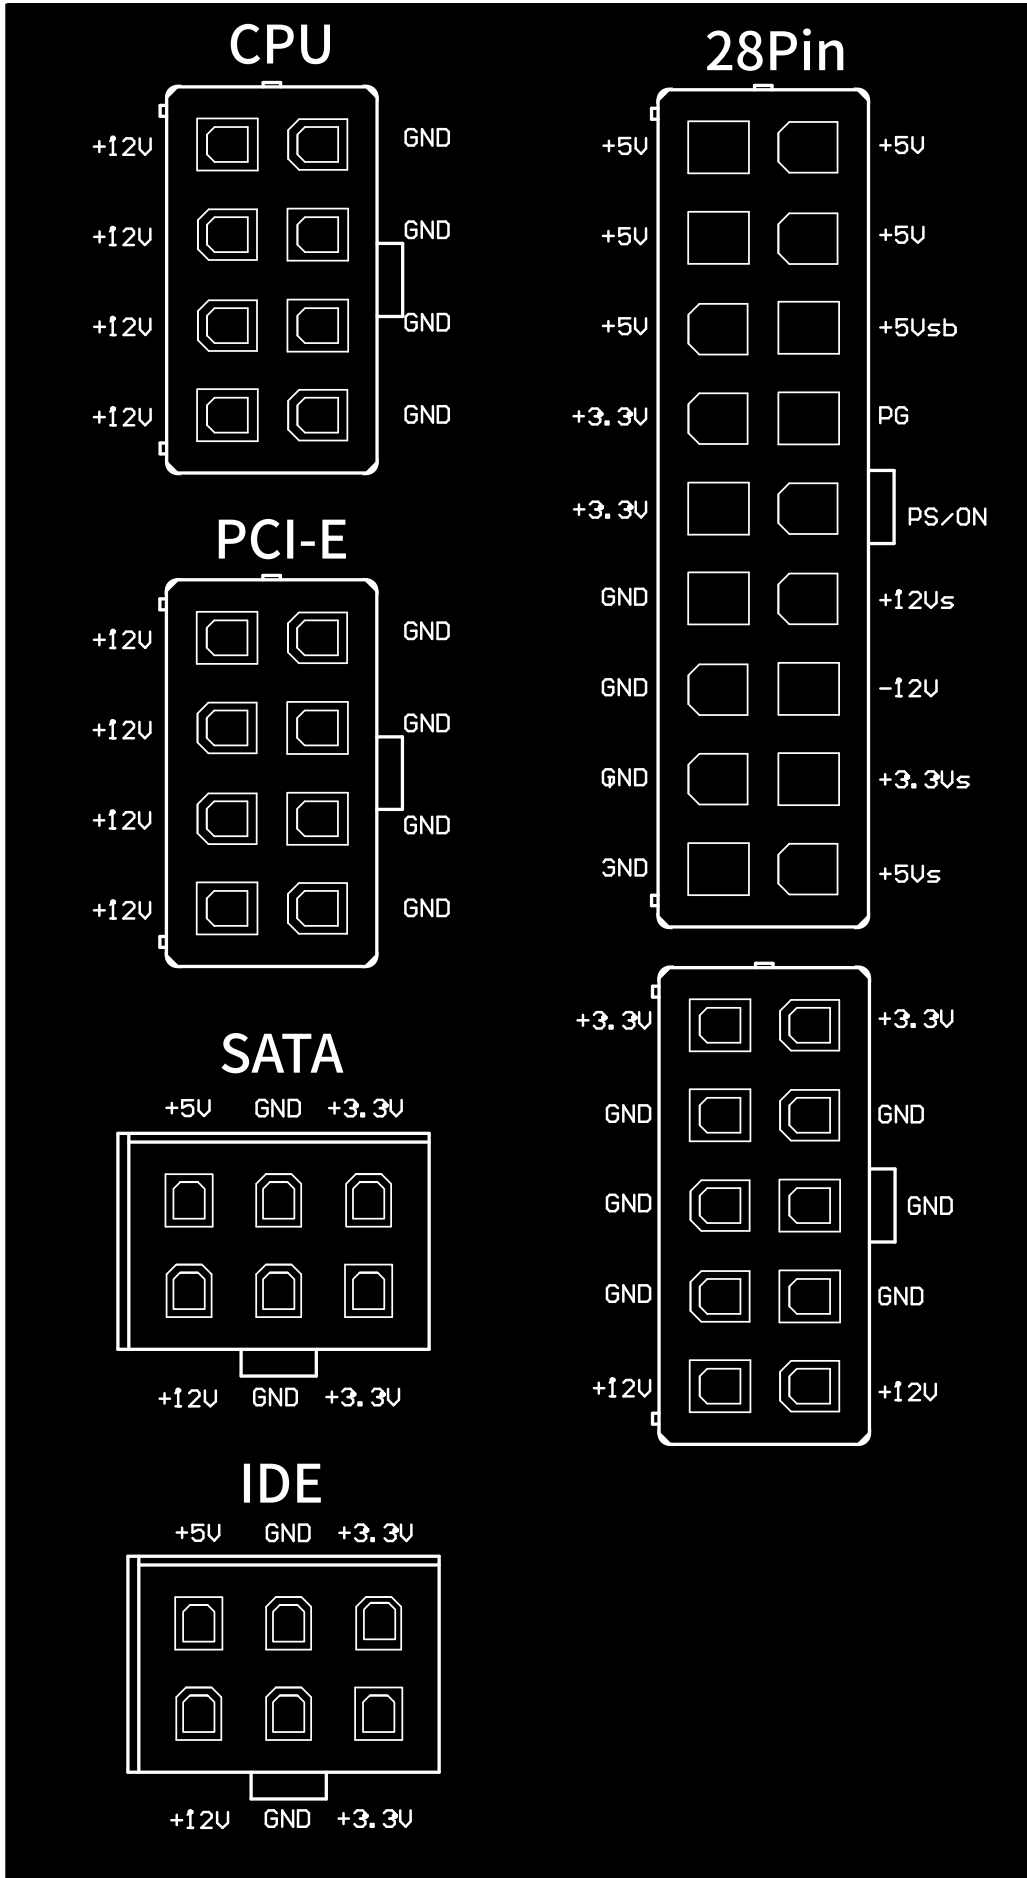 

Full Modular Connector Guideline


VER: FM1 / FM2

 FM1

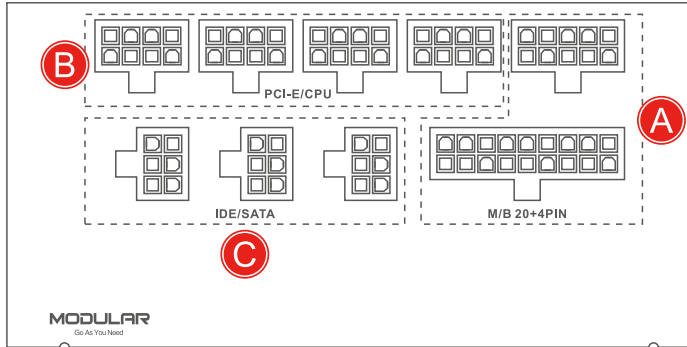

PSU modular port

 
PC Hardware

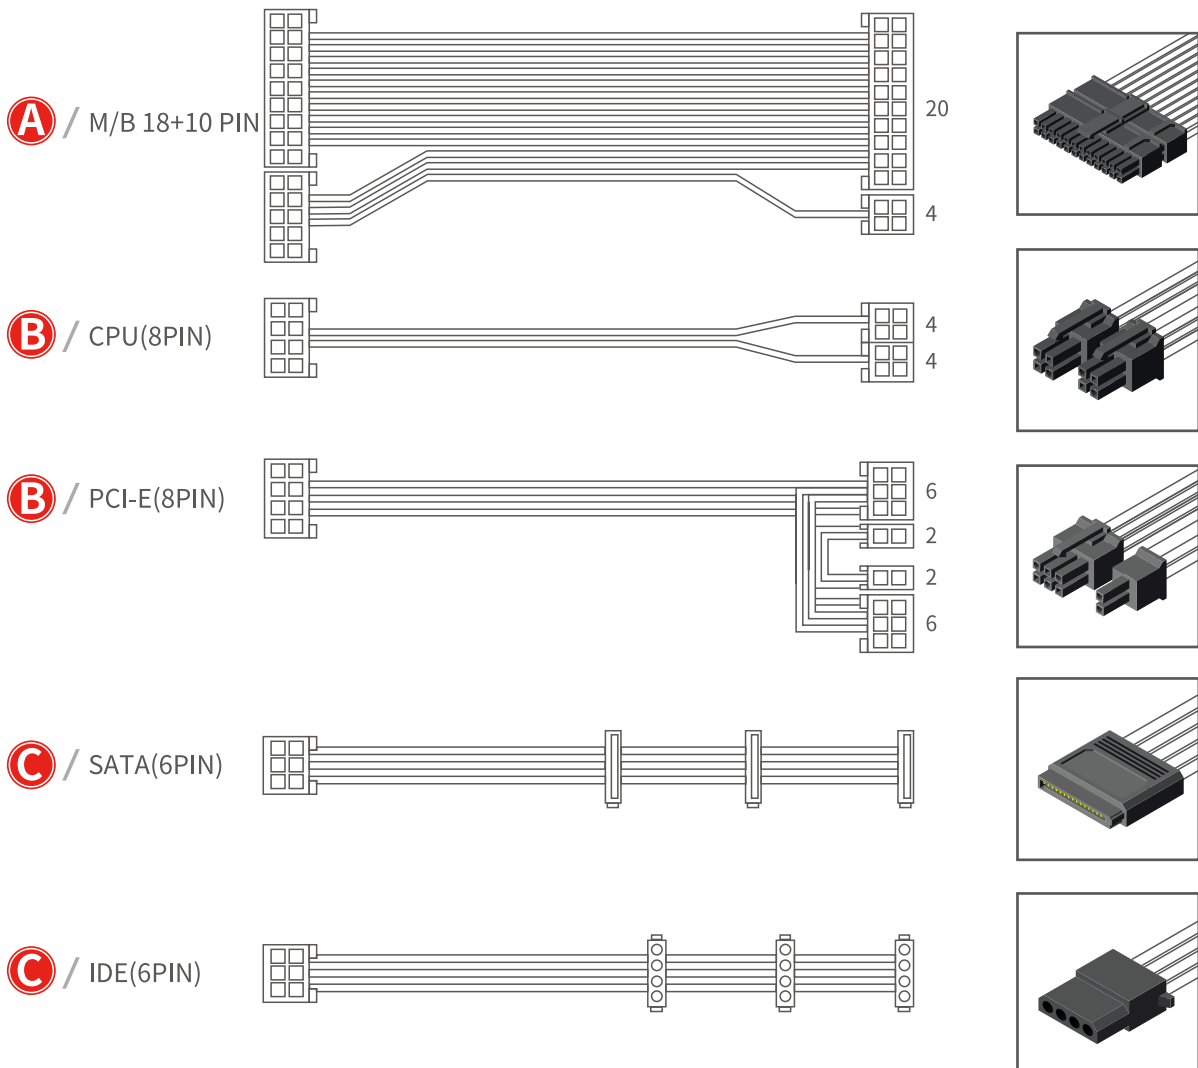


1 PC connection guide **Guideline**

- 1 Install the PSU into the PC case with cooling fan side at the bottom, then screw on.

 - 2 24PIN (20+4) connector connects motherboard.


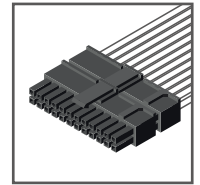


- 3 8PIN (4+4) connector connects CPU.

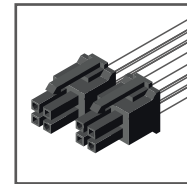 



- 4 8PIN (6+2) connector connects VGA.

  Note: There are multiple kinds of VGA connectors, 6PIN, 6+2PIN&6PIN, 6+2PIN&6+2PIN. Please select your PSU as your requirement.

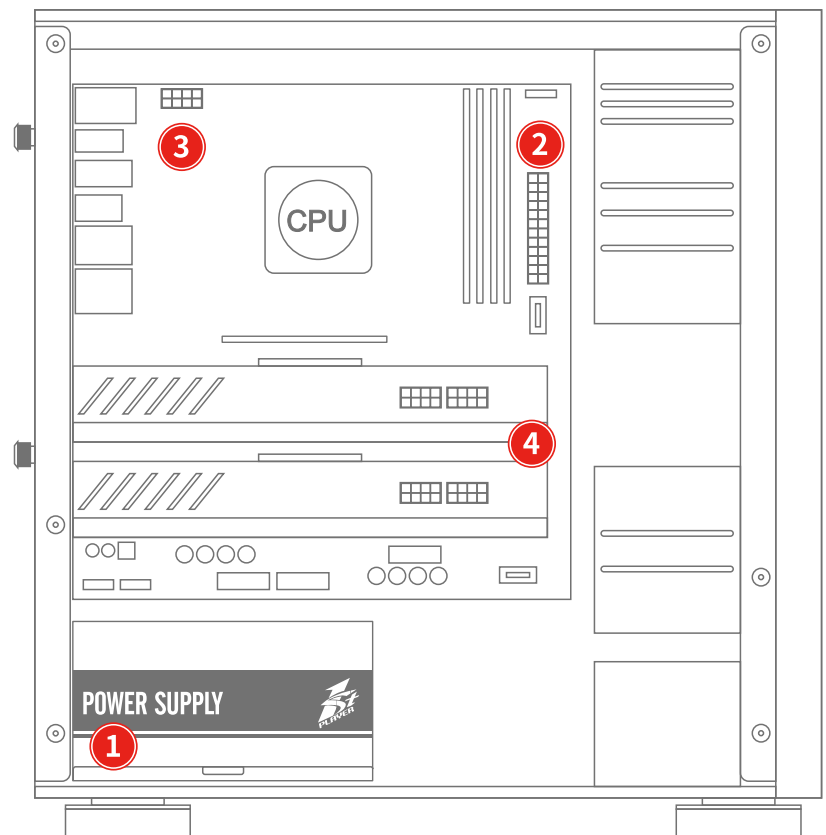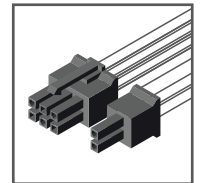

PC connection guide **Guideline**

  - 5** SATA connector connects hard drive. IDE connector connects case fan.

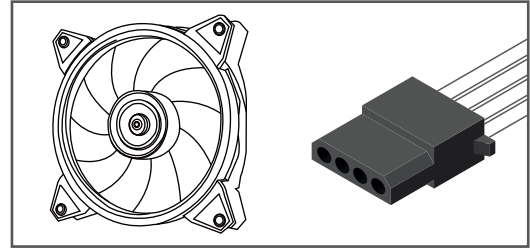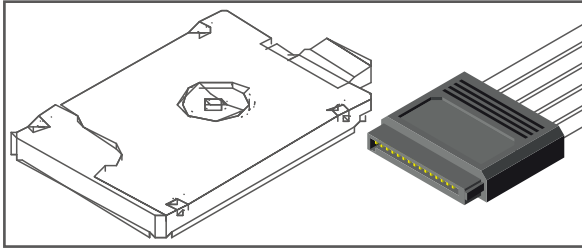

- 6** Connect the motherboard jumpers, USB connectors. (any connection problem please contact motherboard manufacturer)

- 7** Connect the power cord. Make sure the I/O button is on. Press the case power button to power on.

